

INSTALLATION INSTRUCTIONS: POE/Wi-Fi Touchpad

The new **POE/Wi-Fi Touchpad** works on the local network to talk directly to the panel. It is not cloud-based and does not require Internet (once initially installed).


For user instructions see the UNO Touchpad User Guide under www.connect2go.com/guides.

Note: Before installing, make sure the UNO panel is at Firmware version 149 or above and perform a zone update in the UNO programming sections of the portal to ensure that the touchpad has access to the latest panel information. For SOLO make sure the version is at least 143.




Installation

1. Use the metal mount plate to mount the touchpad in either vertical or horizontal orientation as desired using either with the included in-wall box or an existing electrical gang box.

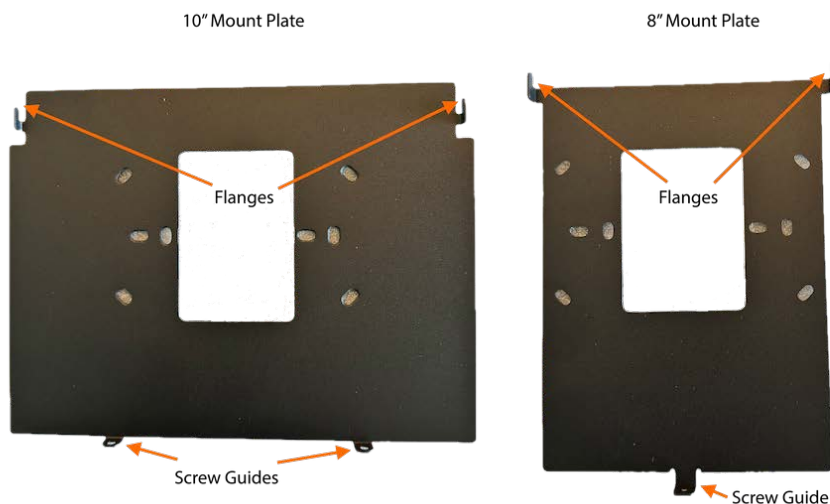

2. Connect power to the touchpad by one of three methods below:
 1. Connect a POE ethernet cable to the ethernet port on the touchpad.
 2. Or connect the 12V wires from an existing security panel to the 12V connections on the touchpad and then connect a standard ethernet cable to the ethernet port.
 3. Or connect the 12V wires from an existing security panel to the 12V connections on the touchpad and then upon power-up connect to your existing Wi-Fi network (It must be on the same network as the UNO panel).

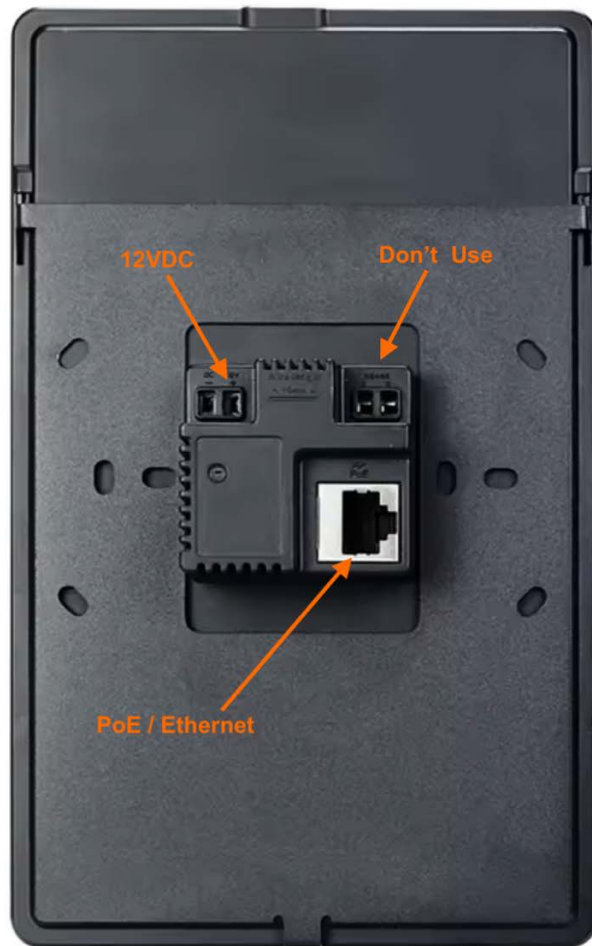

3. Hang the unit onto the mount plate flanges.
4. Use the screw(s) through the screw guide(s) to secure the unit to the mount plate.
5. Follow the on-screen prompts.